Student's Name Date



Subject REWORK FOR U12/S1 pnc board V1.0 Instructor's Name

10/4/01

Correct Schematic for power on-reset circuit is.

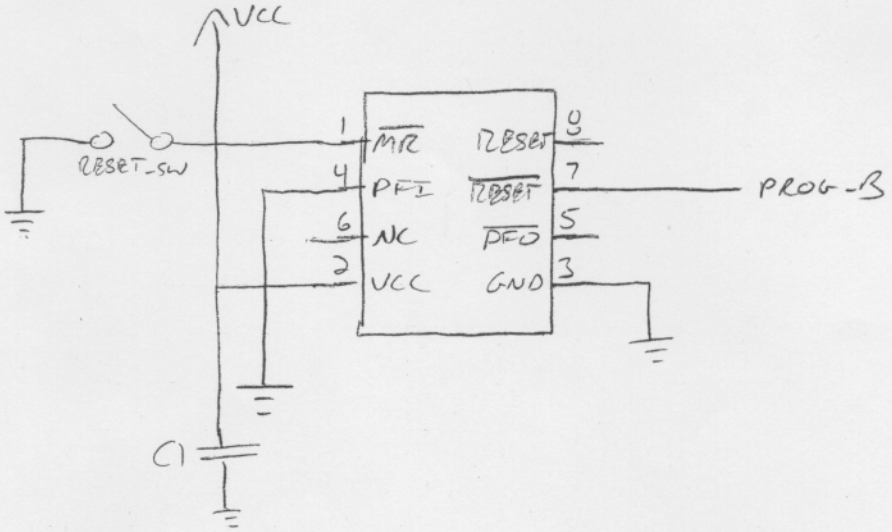


Fix Procedure:

- Cut trace leading off pin 2 of S1 (switch) Board topside

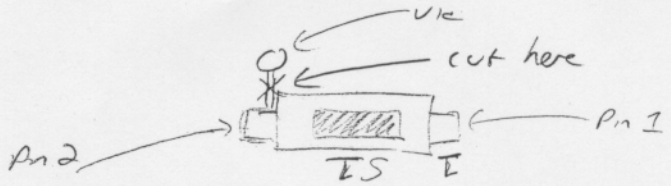


- Cut trace leading off U12 pin 1 (MAX708) Board bottom side

- Solder wire from S1 pin 2 to U12 pin 1